
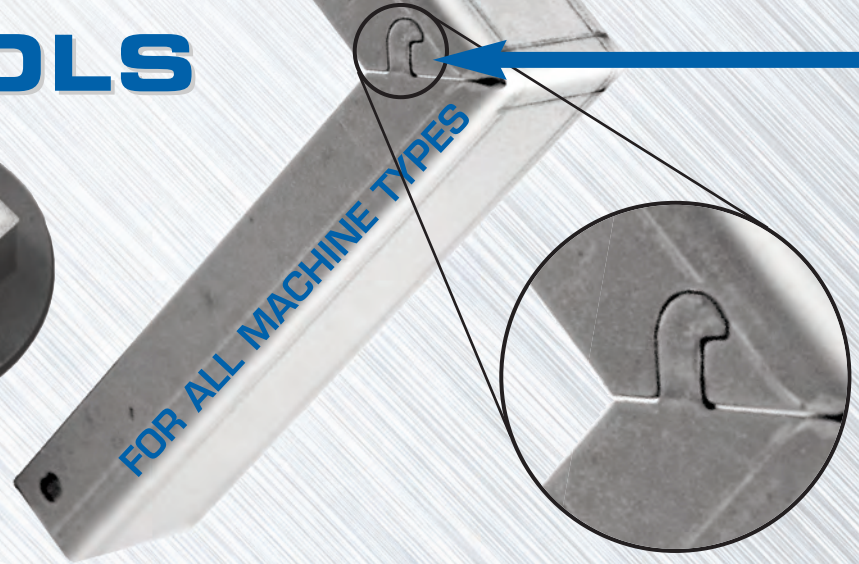


# INTRODUCING...

## THE CORNER LOCK TOOLS

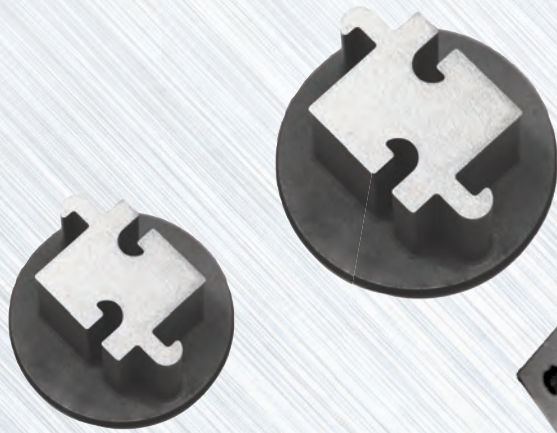

### 4 STEPS TO STRONG CORNER JOINTS

1. Punch special tag shapes and slots in the corners of your component using a 2D shape tool.
2. Form the tags up using a special forming tool.
3. Fold your components up as normal on your press brake.
4. Hammer the tags into the slots to form strong corner joints.



Corner joints are strong and clean with no secondary welding or subsequent weld clean-up operations.

**Wilson Corner Lock Tools** can be used in stainless steel, mild steel and aluminium between 0.8mm and 1.6mm thick.

For more information on the Corner Lock Tools and any other products, Wilson Tool can be contacted direct on: 0800 373748 (freephone) 1-800 709009 (freephone Eire) or alternatively email [sales@wilsontool.eu.com](mailto:sales@wilsontool.eu.com)

Wilson Tool International Ltd. Stirling Road, South Marston Industrial Estate, Swindon, Wiltshire SN3 4TQ

Free phone: 0800 373748 Tel: +44 (0) 1793 831818 Tel free: 1-800 70 90 09 Ireland

Free fax: 0800 373758 Fax: +44 (0) 1793 831945 Fax free: 1-800 53 55 38 Ireland

[www.wilsontool.com](http://www.wilsontool.com) [sales@wilsontool.eu.com](mailto:sales@wilsontool.eu.com)